


# Town of Falmouth Mailbox Design meeting Town Ordinance Requirements

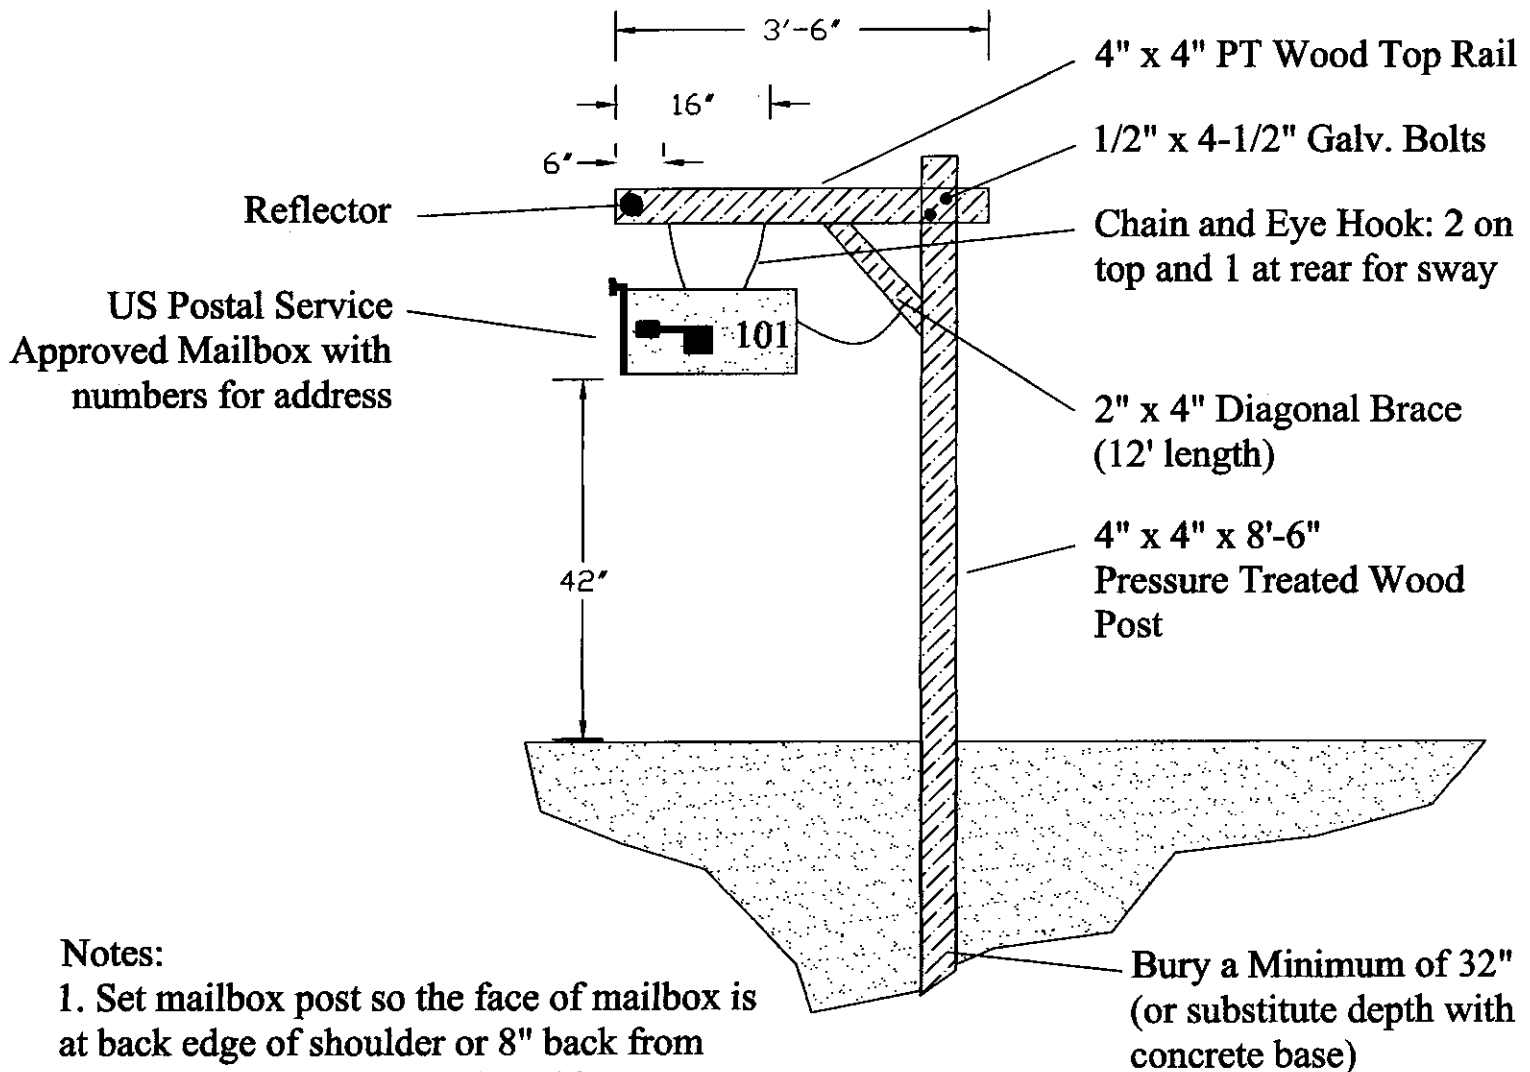

**Notes:**

1. Set mailbox post so the face of mailbox is at back edge of shoulder or 8" back from face of curb for streets with curbing.
2. Cut notch in post and top rail to form cross-halving joint, then bolt 2 pieces together.
3. Seal mailbox/hooks with silicone or rubber washers

**Bury a Minimum of 32"**  
(or substitute depth with concrete base)